



Specialists in the Sourcing of Permanent Way Materials

DTS 'TBAR' INSULATED FERRULE EXTRACTOR (0111/109924)

- CONSISTANT REMOVAL OF FERRULES ON BOTH S&C AND PLAIN LINE.
- WEIGHS ONLY 2.6KG FOR EASIER HANDLING.
- CONFORMS TO BS8020:2011.



1. INSERT AND SCREW TO FULL DEPTH.



2. LEAN WITH THE BAR TO MOVE THE FERRULE.



3. PULL OUT AND REMOVE FERRULE BY HAND.